



Battery & Charger Kits

DB-1850 & DC-18

LED FUNCTIONS OF CHARGER

LED INDICATOR	BATTERY PACK	RED LED	GREEN LED	ACTION
HI/LO TEMP. (SEE MANUAL)	Hot/Cold battery	On	Off	Charging will begin when battery returns to 0°C-40°C
DEFECTIVE BATTERY	Defective	Flashing	Off	Battery pack or charger is defective
BATTERY CHARGING	Charging	Off	Flashing	Charging
BATTERY FULL	Fully charged	Off	On	Charging is complete Maintenance charging



- ● ● ● 80-100% Charge
- ● ● ○ 60-79% Charge
- ● ○ ○ 40-59% Charge
- ○ ○ ○ 20-39% Charge

- ✱ ○ ○ ○ Under 20% Charge
- ✱ ● ● ● Completely Discharged
- ✱ ○ ● ○ High/Low Temperature